


E-MU 0404 USB AUDIO CONTROL PANEL

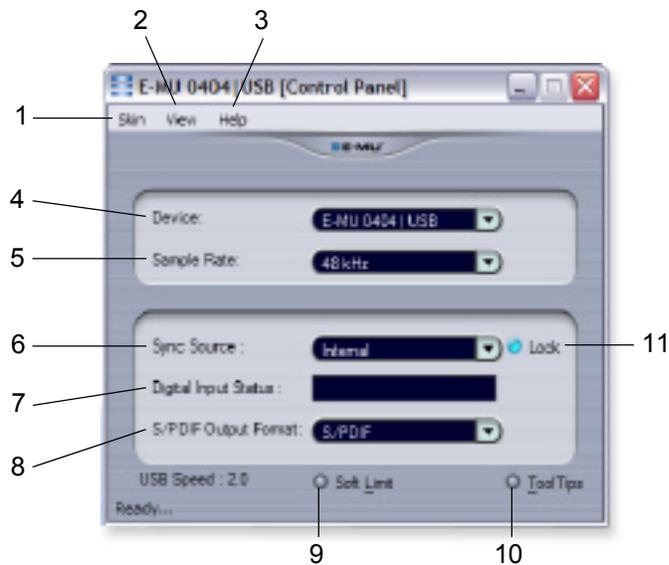

- 1. Skin**
Choose between different appearances for the E-MU USB Audio control panel.
- 2. View**
Hide the application (Ctrl+H). You can restore the application by clicking the E-MU icon  in the System Tray.
- 3. Help**
About E-MU 0404 USB, Audio control, Launch Manual, Check Updates.
- 4. Device**
If you are using more than one E-MU USB Audio device, you can choose which unit is currently being controlled.
- 5. Sample Rate**
Allows you to set the system sample rate: 44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz or 192kHz. There are some performance limitations when operating at higher sample rates.
- 6. Sync Source**
Selects internal or external sync.
- 7. Digital Input Status**
Displays the sample rate of external sync source, if used.
- 8. S/PDIF Output Format**
Selects between S/PDIF or AES/EBU format for the S/PDIF output. This sets the S/PDIF- AES status bit, but doesn't affect the signal level.
- 9. Soft Limit**
Enables or disables the analog peak limiters on the inputs. Soft limiting allows you to record a hotter signal without clipping. The soft limiters gradually engage at -12 dBFS. Signal levels below -12 dBFS are unaffected.
- 10. Tool Tips**
Enables or disables pop-up tool tips about E-MU USB Audio control functions.
- 11. Lock Indicator**
Indicates that the 0404 USB is locked to an external clock source.